Programming

Press and hold the BRT and SEN buttons to access Programming. To exit Programming, simply wait a few seconds without pressing a button. The unit will display **Completed** to confirm your selections.

Press BRT to go from one category to the next		Press VOLUME + or – to change your setting within a category
User Mode	Advanced* Novice	Access and customize all Settings and Preferences Access and customize units and display color, (all other Settings are set to factory defaults) NOTE: Switch back to Advance mode to view all Preferences
Pilot	Scan Bar* Full Word	Scanning Bar with Full Word Full Word: AutoScan, Auto NoX, or Highway
Display Color	Copper*/Blue/Green/Red	Set color to match your vehicle's dash display
Speed Display	On* Off	Displays current speed Displays battery voltage
Cruise Alert	Off / 20-160 mph 20 mph*	Offers double beep alert tones below specified speed
Over Speed	Off / 20-160 mph 70 mph*	Reminds you when you exceed a specified speed
Meter Mode	Standard* Tech Basic	Single band with front and rear signal strength bar graphs Single band with numeric frequency and front and rear signal strength bar graphs Simple messages replace bands: Caution (if traveling below cruise alert limit) Slow Down (if traveling above cruise alert limit)
Tones	Standard* Mild	Standard Beltronics alert tones Mild doorbell chime alert tones
AutoMute	Low/Med*/High/Off	Automatically reduces audio to preferred volume during alert
AutoLock	On* / Off	Automatically stores and locks out false alarms
Units	English*/Metric	Units for distance and speed
Language	English*/Espanol	Language for voice and text
Voice	On* / Off	Voice announcements
GPS Filter	On*/Off	Enables GPS-powered features

AutoPower	Off	Power turns on or off depending on your vehicle's ignition		
	1 Hour 2 Hours 4 Hours* 8 Hours	type (constant power or switc Powers off automatically after Powers off automatically after Powers off automatically after Powers off automatically after	r 1 hour NOT r 2 hours Auto r 4 hours wor.	TE: DPower only ks with constant ver ignition
		NOTE: If AutoPower is on, to say blank after 30 minutes without		play screen goes
Band Enables	Default* Modified	Default Settings Band Enables have been mod	lified from their def	fault settings
Press SEN to go from one band category to the next		Press VOLUME + or – to cha your setting within a catego		
X Band	On*/Off			•••••
K Band	On*/Off	Freq: 24.050-24.250 GHz NOTE: When K Band is off, you d band to turn on or off.	can select separate s	segments of the
KN1	On*/Off	Freq: 24.050 - 24.110 GHz		
KN2	On*/Off	Freq: 24.110 - 24.175 GHz		
KN3	On*/Off	Freq: 24.175 - 24.250 GHz		
KN4	On / Off*	Freq: 23.950 - 24.050 GHz		
Ka Band	On*/Off	Freq: 33.400-36.000 GHz NOTE: When Ka Band is off, you c on or off.	an select separate se	gments of the band to turn
KaN1	On / Off*	Freq: 33.400 - 33.700 GHz	KaN6 On/Off*	Freq: 34.800 - 35.160 GHz
KaN2	On / Off*	Freq: 33.700 - 33.900 GHz	KaN7 On / Off*	Freq: 35.160 - 35.400 GHz
KaN3	On*/Off	Freq: 33.900 - 34.200 GHz	KaN8 On*/Off	Freq: 35.400 - 35.600 GHz
KaN4	On*/Off	Freq: 34.200 - 34.600 GHz	KaN9 On/Off*	Freq: 35.600 - 35.840 GHz
KaN5	On*/Off	Freq: 34.600 - 34.800 GHz	KaN10 On / Off*	Freq: 35.840 - 36.000 GHz
Ka Band	On*/Off			
Ka-POP	On / Off*			
Laser	On*/Off			
TSR	On*/Off	Automatically rejects traffic flo	ow sensors-monito	ring false alarms
Marker Enable	On*/Off Modified	Default Settings Marker Enables have been m	odified from their c	default settings

Press SEN to go from one marker category to the next		Press VOLUME + or – to change your setting within a category
Other	On*/Off	Other location
Redlight	On*/Off On*/Off	Red light camera
Red & Speed		Red light & speed camera
Speed Cam	On* / Off	Speed camera
Air Patrol	On / Off*	Known aircraft patrolled areas
		NOTE: User cannot mark an air patrol location
Speed Trap	On*/Off	Speed trap
Air Patrol	On / Off*	Known aircraft patroled areas
		NOTE: User cannot mark an Air Patrol location
Clear Locations	Marked Lockouts Defender Format	Clear all user Marked locations. Press SEN button to confirm Clear all lockouts. Press SEN button to confirm Clear all DEFENDER data. Press SEN button to confirm Clear DEFENDER database, all markers, and all lockouts. Press SEN button to confirm
		FIESS SEIN BULLOIT LO COMMITTI

*Default Setting

Contact Us

Notes for Programming

For descriptions of features and functions available when connected to ESCORT Live, visit Beltronics.com and download the GT-360 Owner's Manual.

To view serial number and software revision press MRK and MUTE while powering on detector.

To restore GT-360 to its original factory Settings, press and hold MRK and BRT while turning the power on. A **Restored** message will display, acknowledging the reset.

Software Updates

GT-360's red light and speed camera database is easily updated using our exclusive detector software tools found on our web site. Firmware, or the operating software for the detector, can also be updated using these tools.

In order to have access to these updates, you must register your GT-360 at www.Beltronics. com. Once registered, you will receive email notifications that updates are now available for your database or firmware. To handle your software and DEFENDER updates you need to connect your GT-360 to a computer first. You can connect GT-360 to a computer via USB/USB Mini B cable.

866.468.0322 • Beltronics.com

Beltronics USA, Inc.

5442 West Chester Road, West Chester OH 45069

Beltronics One Year Limited Warranty

What this warranty covers: Beltronics USA, Inc. ("Beltronics") warrants your Product against all defects in materials and workmanship.

For how long: One (1) year from the date of original purchase from an authorized Beltronics dealer.

What we will do: If a breach of warranty occurs, Beltronics, at its discretion, will either repair or replace your Product free of charge.

What we will not do: Beltronics will not pay shipping charges that you incur for sending your Product to us.

What you must do to maintain this warranty: Show original proof of purchase or receipt from an authorized Beltronics dealer.

Warranty exclusions: This warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site, including E-bay, U-bid, or other non-authorized resellers. 5. You are not the original purchaser of the Product from an authorized dealer or did not receive it as a gift from the original purchaser of the Product from an authorized dealer.

To obtain service: 1. Contact Beltronics (1-800-341-2288) to obtain a Return Authorization Number. 2. Properly pack your Product and include: your name, complete return address, written description of the problem with your Product, daytime telephone number, and a copy of the original proof of purchase or receipt. 3. Label the outside of the package clearly with your Return Authorization Number. Ship the Product pre-paid (insured, for your protection) to: Beltronics USA, Inc., 5442 West Chester Rd., West Chester, OH 45069.

LIMITATION OF WARRANTY: The obligations set forth above are Beltronics' sole obligations and your exclusive remedy. Beltronics makes no other express warranty. Any implied warranty of merchantability or fitness for a particular purpose that may be applicable to the Product is limited in duration to the duration of this warranty. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. BELTRONICS SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Beltronics is not responsible for products lost in shipment between the owner and our service center. Other legal rights; This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

©2018 Beltronics USA, Inc. Beltronics®, GT-360™, Escort Livel™, Defender®, TrueLock™, SmartShield®, SpecDisplay™, AutoSensitivity™ and EZ Mag Mount™ are trademarks of Beltronics USA, Inc. Manufactured in the Philippines. Features, specifications and prices subject to change without notice.

FCC NOTE: Modifications not expressly approved by the manufacturer could void the user's FCC granted authority to operate the equipment.

FCC ID:QL4M6. CONTAINS FCC ID:QKLBT2

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Live life in the passing lane.



Arrows indicate direction of the threat.











Congratulations



Take the freedom of the road back with the Beltronics GT-360, equipped with 360° high definition protection, threat direction arrows, and intelligent GPS technology to eliminate false alerts.

Go to Beltronics.com for full featured Owner's Manual.



GT-360 features a new multi-color OLED display.
Brilliant graphics illuminate intuitive icons that identify the type of threat at a glance.

GT-360 Features

- GT-360's HD Performance accurately identifies real threats sooner than other detectors, and with threat direction arrows, provides you with location information about these threats.
- Updatable IVT Filter™ automatically reduces false alerts from moving In-Vehicle Technology sources such as collision avoidance systems and adaptive cruise control.
- GPS location-based intelligence automatically locks out false alerts and allows you to mark locations for future reference.
- Access to the DEFENDER Database, which warns you of verified speed traps, speed cameras, and red light cameras.
- Built in Bluetooth® technology gives you access to ESCORT's award winning app, ESCORT Live.
 The exclusive real-time ticket-protection network which warns you of upcoming alerts received and reported by other users in the area, and gives you access to local speed limit data for over-speed alerts.



Registration and ESCORT Live

Before downloading ESCORT Live, you must first register your device. Be sure to have your device nearby, as you will need its serial number.

- 1 Visit www.Beltronics.com and click Product Registration.
- 2 Click the "Registration for all devices" link.
- **3** Follow the onscreen instructions to register your device.

Be sure to write down the username and password you create, as you will need this information to access and download ESCORT Live. (You will also receive an e-mail with this information, once you have registered your device.)

For iPhone:

 
- 1 Ensure GT-360 power is ON
- **2** Open the App Store on your iPhone and search for **ESCORT Live Radar**.



- 3 Follow the onscreen instructions to download ESCORT Live Radar and then open the app.
- **4** When prompted, enter the username and password you created when registering your product at Beltronics.com.
- 5 Press the Settings button then select Devices.
- **6** You should see **GT-360** listed with Not Connected underneath.
 - Press the **GT-360** device entry and when prompted select Pair.
- 7 The Bluetooth icon on the GT-360 display will appear to confirm that it is paired to your iPhone.

For Android based smartphones:

- **1** Ensure GT-360 power is ON.
- **2** On your smartphone go to Bluetooth® Settings and make sure that Bluetooth® is ON.
- 3 Press Scan for devices and wait for the device list to populate, GT-360 should appear under Available devices.
- 4 Press the GT-360 device entry.
- **5** The Bluetooth icon on the GT-360 display will appear to confirm that it is paired to your smartphone.
- **6** Open Google Play on your smartphone and search for **Escort Live Radar**.

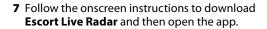

- **8** When prompted, enter the username and password you created when registering your product at Beltronics.com.
- **7** Open the app, walk through the tutorial, and you're ready to hit the road!



Installation

Your new detector comes with the revolutionary **EZ Mag Mount™**. Simply tilt the display end of the detector up and slide it onto the mounting bracket. The magnetic mount holds the detector in place. To remove the detector from the mount, simply lift the display end of the detector and the detector releases from the mount.

Mounting Tips:

- Center of windshield between driver and passenger.
- Ensure clear view of road ahead and sky above.
- Avoid windshield wipers and heavily tinted areas.


To mount the detector in your vehicle:

- Remove paper backing from EZ Mag Mount™ ` StickyCup.
- **2** Ensure the locking clamp is open.
- 3 Firmly press EZ Mag Mount™ StickyCup onto windshield and close the locking clamp to secure.

- **4** To adjust view, loosen thumb wheel and adjust angle of mounting bracket. Tighten thumb wheel to secure.
- 5 Tilt the display end of the detector slightly upward and engage with the flanged edge of the mounting bracket. The EZ Mag Mount™ magnet holds the detector in place.
- **6** To remove the detector, simply lift the display end of the detector upward. The detector will release from the mount.
- **7** To remove mount from windshield, release locking clamp and pull tab on top of StickyCup.

EZ Mag Mount™ Care Instructions:

Should the EZ Mag Mount™ StickyCup accumulate debris and lose its stickiness, simply rinse under warm water, gently wipe off debris and allow to air dry.

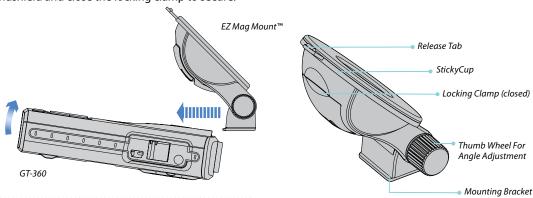

Controls & Features

Using GT-360

- **1** Plug small end of SmartCord USB into modular jack on GT-360 and large end of SmartCord USB into your vehicle's lighter/accessory socket
- 2 GT-360 should power on automatically. If not, press the device's power button. (1)

Power requirement

11.0-16.0 Volts DC negative ground 400mA standby, 700 mA maximum

NOTE: You can easily access and customize all of your Settings and Preferences by pressing and holding the BRT and SEN buttons. See Settings and Preferences for details.

Modular Jack Connects to SmartCord for powering your device

Earphone Jack

Connects to optional 3.5 mm stereo earphone.

Using SmartCord USB

• Mute Button:

- Press to mute the audio for a specific alert.
- Press three times to lock out a false alert.
- Press twice while receiving a locked-out alert to unlock.
- When connected to ESCORT Live press and hold mute button on unit or cord to manually report to other users a verified X or K-band alert, or a police officer observing traffic.
- Alert Light: Blinks red when receiving a radar or laser alert.
- Power Light: Lights green when device is powered on.
- USB Charging Port: Charge smartphones, tablets and other USB-charged Devices.



SmartCord USB AdapterConnects to lighter/accessory socket

MRK

Mount Area
The EZ Mag Mount™
attaches to device here

To mark a location for future alerts, press MRK twice, then VOL + or – to select the type of marker, then MRK again to confirm. Press twice while receiving marker alert to unmark

Volume

Press and hold + or - to adjust volume

BRT

Press to adjust display brightness (Min, Med, Max, Auto, Dark)

Power

Press to turn GT-360 on or off

MUTE

Press to mute an alert; press three times to lock out a false alert; press twice while receiving a locked-out alert to unlock

SEN

Press to adjust detector sensitivity (Auto, AutoNoX, AutoLoK, and Highway)



Display

Showing current speed

Display (OSP)

OverSpeed alert setting that can be adjusted in Preferences. **Bluetooth** icon will appear on display screen blue when paired to phone and Speed limit data will show here when ESCORT Live App is open.

